

Download and Install Picosoft 6.2

Go to the Allen-Bradley website to download the Picosoft 6.2 software.

<http://ab.rockwellautomation.com/programmable-controllers/picosoft-software>

Click on Download PicoSoft Software Version 6.2 [ZIP]
Download the software and install it.